 


Airack – Care Card


Daily Cleaning Procedure

- Step 1**
Isolate the electrical supply and remove the Dryer Cover from the base.

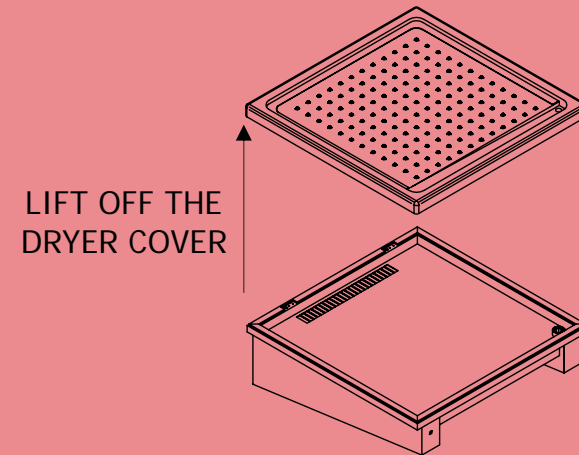

- Step 2**
Clean the top of the cover using a damp cloth.

Clean the underside of the cover using a damp cloth, paying particular attention to the air nozzles and base matting surfaces.

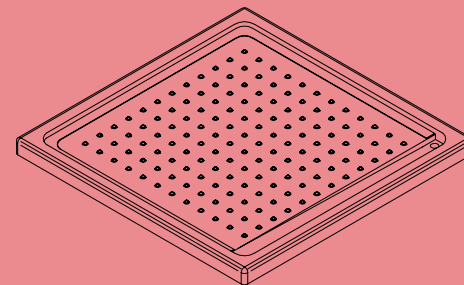

Do not use proprietary cleaning agents. The odours will contaminate the glasses.


- Step 3**
The base is split into two sections.

Airflow Area

Clean using a damp cloth.

Drain Outlet

Clean using a proprietary cleaning agent, also use the cleaning brush supplied. Rinse out with fresh water, ensuring that the water vacates down the drain holes.


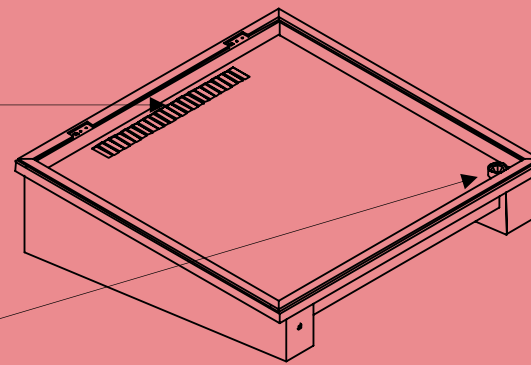


Cleaning Brush

- Step 4**
Reassemble the unit, reconnect the electrical supply and operate several cycles before use.

Cautionary Notes

- Always use a full load of glasses and place the basket centrally onto the Airack (top is recessed for location – Fig 1).
- Ensure the correct orientation of compartmented baskets. The glasses should be tilted forward to the front of the Airack (Fig 2).
- Never use the Airack for dregs, or liquid disposal.
- Never use the Airack for any other purpose other than drying glassware.

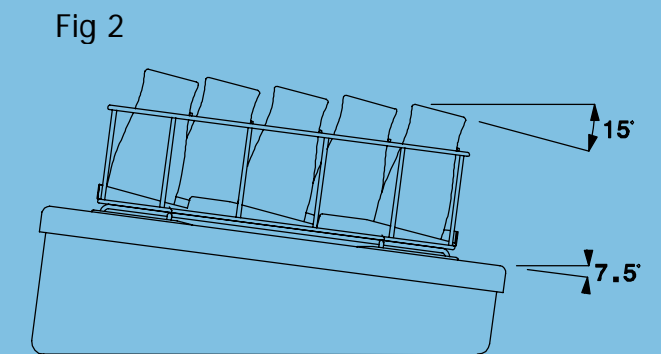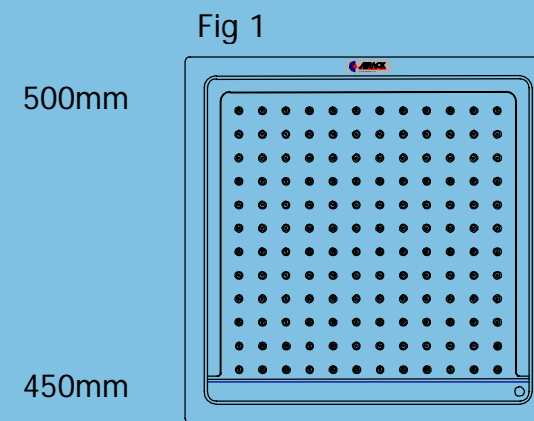

Using The Airack

- Switch on the power to the Airack.
- Immediately after the washing process, place a full basket of glasses on top of the unit and press the button to start the drying cycle. The neon will light up.
- At the end of the drying cycle (neon goes out) the unit will automatically switch off and will remain off until the button is pressed again.
- When the drying cycle is complete, remove the basket of clean dry glasses for immediate use, or to storage.

If You Require Help

- Owners Manual** Refer to CD ROM for more detailed information and advice
- Service And Technical** Tel: 01933 666244
- Sales** Tel: 01933 666244
- Website & Email:** www.clenaware.co.uk / info@clenaware.co.uk