



Daily Cleaning Procedure

 
 
 
AIRACK Care Card

STEP 1 Isolate the electrical supply and remove the Dryer Cover from the base.


STEP 2 Clean the top of the cover using a damp cloth. Clean the underside of the cover using a damp cloth, paying particular attention to the air nozzles and base matting surfaces.

STEP 3 The base is split into two sections.
Airflow Area
Clean using a damp cloth.
Drain Outlet
Clean using a proprietary cleaning agent. Rinse out with fresh water, ensuring that the water vacates down the drain holes.

STEP 4 Reassemble the unit, reconnect the electrical supply and operate several cycles before use.

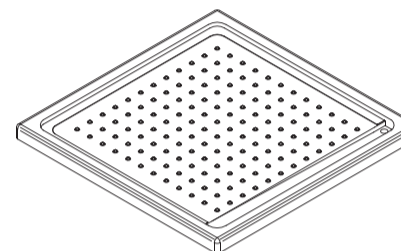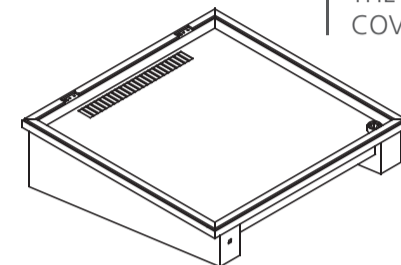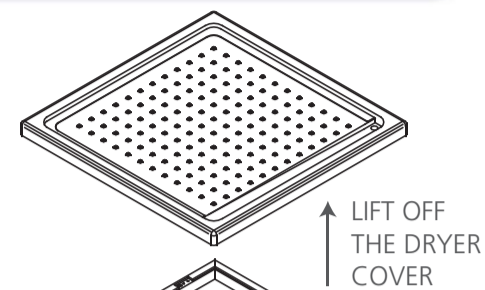

 Do not use proprietary cleaning agents. The odours will contaminate the glasses.

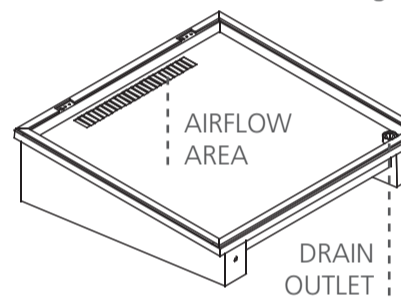

Cautionary Notes

- ✓ Always use a full load of glasses and place the basket centrally onto the Airack (top is recessed for location – Fig 1).
- ✓ Ensure the correct orientation of compartmented baskets. The glasses should be tilted forward to the front of the Airack (Fig 2).
- ✓ Never use the Airack for dregs, or liquid disposal.
- ✓ Never use the Airack for any other purpose other than drying glassware.

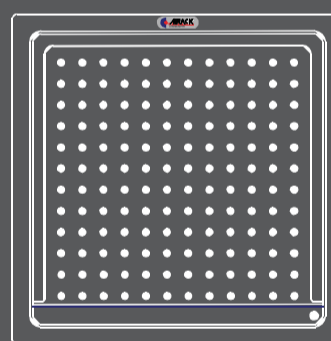 


FIG 1

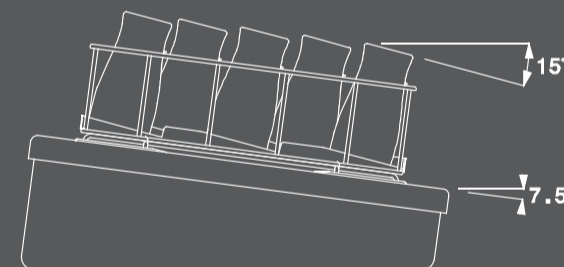 


FIG 2

Using The Airack

1 Switch on the power to the Airack.

2 Immediately after the washing process, place a full basket of glasses on top of the unit and press the button to start the drying cycle. The neon will light up.

3 At the end of the drying cycle (neon goes out) the unit will automatically switch off and will remain off until the button is pressed again.

4 When the drying cycle is complete, remove the basket of clean dry glasses for immediate use, or to storage.

If You Require Help

✓ **Owners Manual**
Refer to CD ROM for more information and advice



✓ **Service and Sales**
Tel: 01933 666244



✓ **Website & Email**
www.clenaware.co.uk
info@clenaware.co.uk

